


DRINKING WATER PROGRAM FOR SCHOOLS AND CHILD CARE FACILITIES

Building Use and Sampling Preparation



Use this flowchart to determine if flushing needs to occur in your building to simulate typical daily system water quality before sampling.*

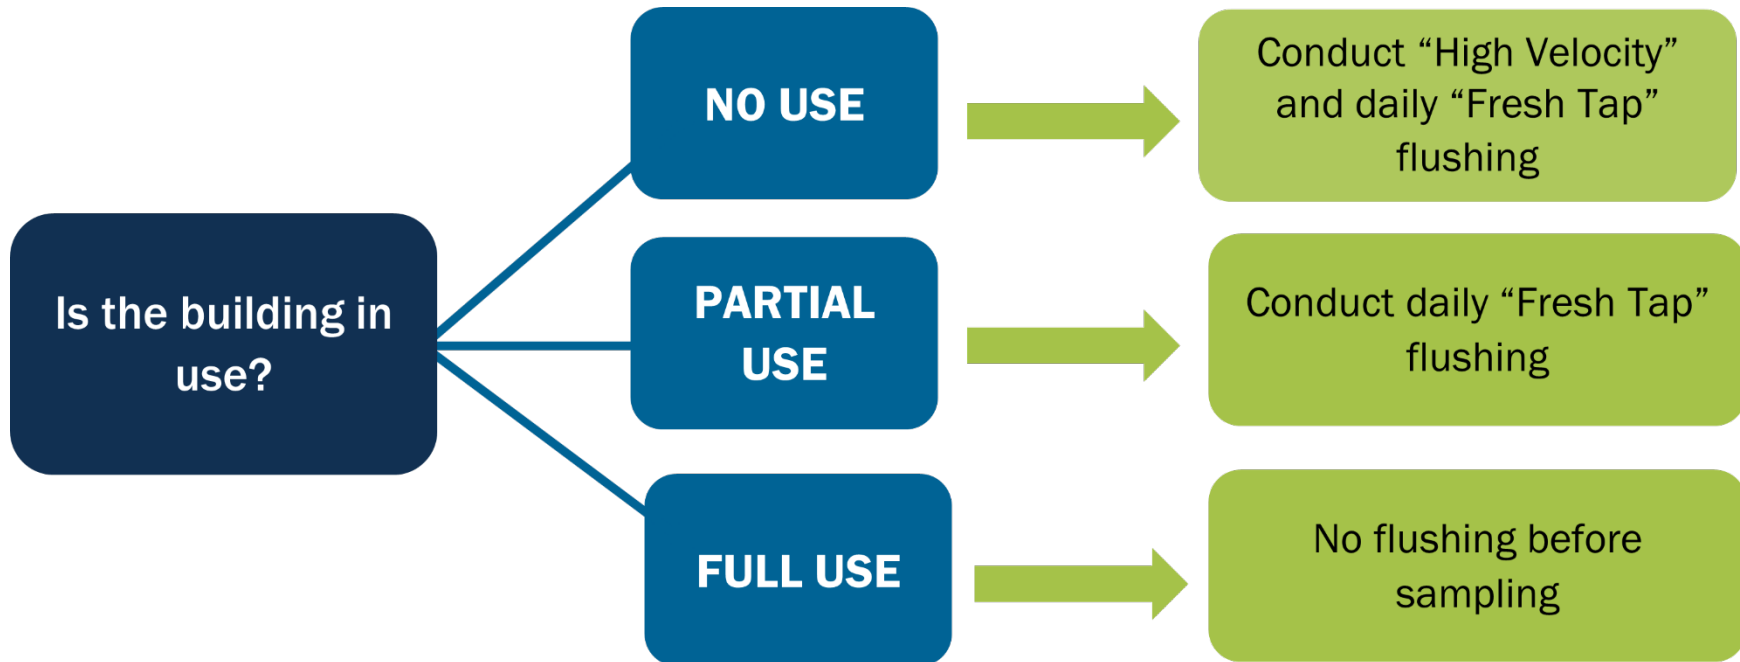

***Reminder:** For investigative lead and copper testing, water must remain motionless in the plumbing system for at least 8 hours prior to the collection of samples. The High Velocity and Fresh Tap flushing method guidance documents may be found at Michigan.gov/SchoolWater. A routine flushing program should be incorporated in every school maintenance plan.

The Michigan Department of Environment, Great Lakes, and Energy does not discriminate on the basis of race, sex, religion, age, national origin, color, marital status, disability, political beliefs, height, weight, genetic information, or sexual orientation in the administration of any of its programs or activities, and prohibits intimidation and retaliation, as required by applicable laws and regulations.